

AAE Model No. ATBC Aluminum Toe Board for Depressed Pad

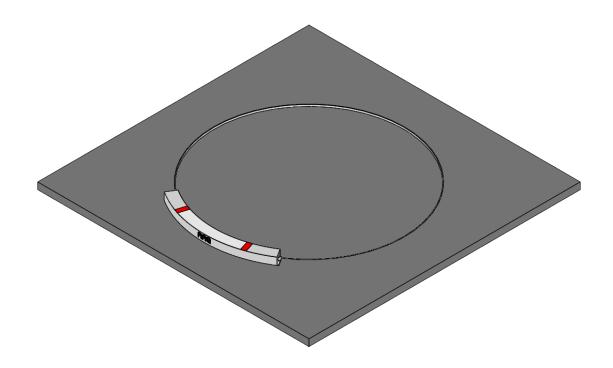

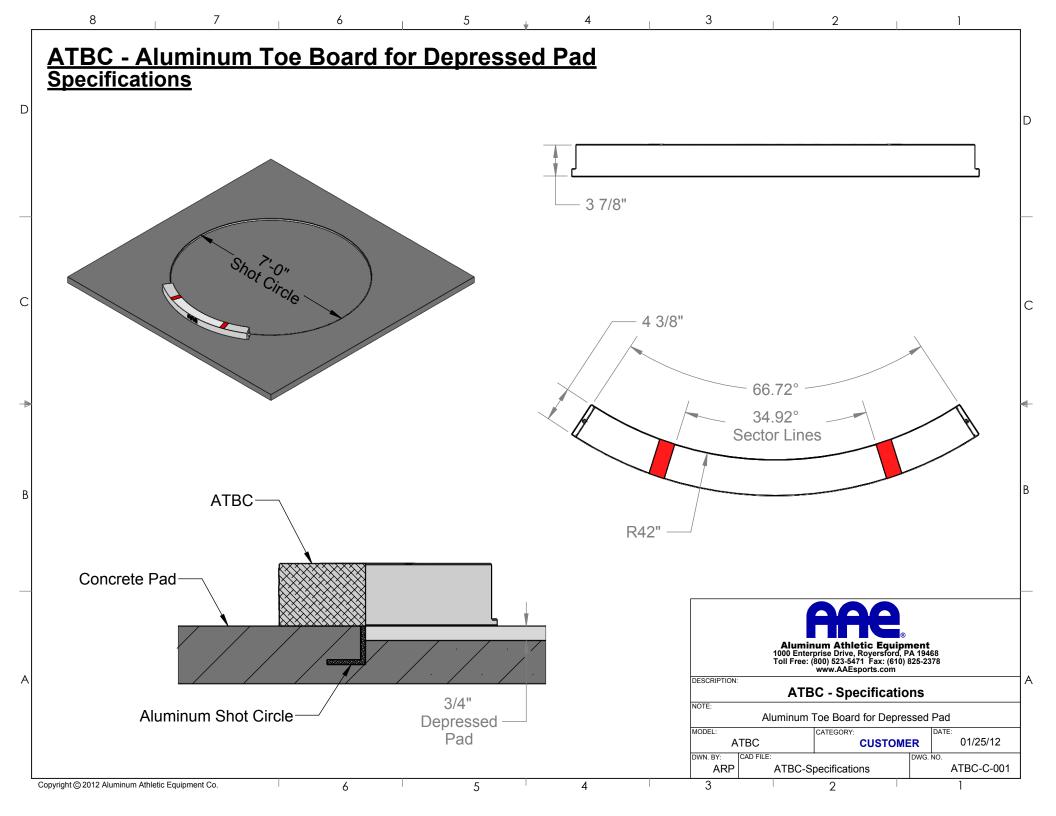



ATBC (for use with 3/4" depressed pad) SHOTPUT TOE BOARD INSTRUCTIONS INSTALLATION & PARTS LIST

INSTALLATION:

- Position the toe board (Item no. 1) in place. The inner edge of the toe board should line up with the inside edge of the depressed pad, and be centered in the throwing sector (See Drawing No.AAE-68 for diagram). Establish the locations for installing the concrete anchors.
- 2. Remove the toe board. Using a 3/4" diameter masonry bit (not included), drill 2 (two) holes, 2-1/2" deep, at the marked locations.
- 3. Install concrete expansions shields (Item No. 4), threaded side down, into the holes and tap flush with the concrete surface.
- 4. Set toe board back into place and attach with 3/8"-16 x 2-1/2" machine bolts, and 3/8" diameter washers (Item nos. 2 & 3). Tighten bolts firmly to expand concrete anchors into place.

PARTS LIST:

Pt#	Item	Description	Qty.
1	ATBC Toe Board	3-1/4" high x 4-1/2" wide x .250 wall, cast aluminum toe board, 4' sector	1
2	Bolt	3/8"-16 x 2-1/2" S.S.	2
3	Washer	3/8"-16 S.S.	2
4	Expansion shield	3/8"-16 x 2" Loxin machine bolt concrete expansion shield	2

K:\AAE Data\PDF Files\Product Instructions & Parts Lists\Track & Field\ATBC\ATBC Assembly Instructions.doc Copyright © 2000 Aluminum Athletic Equipment Co.